

Triple+ CLM™ Repeater Installer Guide v3.0

P/N: CLM-RNAMAP-3-00, CLM-RNEMEA-4-00

◆ Welcome

Thank you for choosing Triple+ CLM™.

Triple+ CLM™ is the ultimate Water Leak Damage Prevention cloud-based system. The system is managed via an App and is designed to prevent damage due to water leak. Triple+ offers you a total peace of mind when you are in or away.

◆ Please note

Please read these instructions carefully and follow the system's installation and commissioning steps.

Maintain this document in a safe place for future reference. Contact your authorized installer with any questions.

⚠ Warning! This product was designed to prevent water leak damages and should be used for this purpose only.

◆ Triple+ CLM™ system

Triple+ CLM™ line of products includes innovative battery-operated devices which enables the automated control of water valves. This is unified under the "Smart Home" umbrella. The Triple+ CLM™ HUB serves as a Gateway that ensures a secured communication between the system devices, Triple+ cloud and App.

Triple+ CLM™ integrates easily into the Smart Home IoT ecosystem, providing a unique cloud-based secured platform for Water Leak Management.

◆ Repeater specification

Part No.	CLM-RNAMAP-3-00, CLM-RNEMEA-3-00
Product description	The wireless repeater is used to extend the communication range between the system devices and the HUB. Generally, the repeater is used when the signal between the devices and the HUB is too weak.
Dimensions	5.9x8.0x2.5cm (2.32x3.15x0.98")
Weight	110gr (3.8 Oz)
Power supply	External Adaptor Input 110-240 V AC
Operation voltage	5V (2 X AAA back up batteries included Up to two hours)
Operating RF	868/915 MHz
Transmission range	Open space - up to 230 m (750 ft.) Indoor - up to 120 m (390 ft.) Avoid installing in a metal cabinet.
Working temperature	-20 to +50°C (-4 to +122°F)
Certifications	FCC ID: 2AFOIRPT IC: 20798-RPT

◆ Backup Batteries Installation

1. Slide down the batteries case cover.
2. Insert 2 x AAA batteries (included).
3. Slide back up the batteries case cover.



◆ Repeater description

- A. Power cable.
B. LED indicator



◆ Repeater installation Steps

1. Locate the best location for installation.
2. Use screws or the double-sided adhesive tape to mount the back cover of the Repeater to the wall

◆ Repeater LED behavior

- GREEN flashes every 30 seconds – OK
- BLUE flashes every 30 seconds – communication problems
- RED flashes every 30 seconds – low battery

◆ System component synchronization and activation

Triple+ CLM™ devices are installed and activated using the Triple+ CLM™ installer's or End-User APP available on AppStore and Google Play. It is recommended to test the unit before installation.

This Repeater is designed for indoor use only and should be installed by an authorized installer.

Warranty instructions

Please visit www.tripleplus.io/support for warranty, technical support, terms and conditions or troubleshooting

PW0000109